

Insulated Transport Products

Cold Draw


Pipe Installation Instructions



1. Install pipe mounting bracket in the horizontal position in the top corner of the trailer using two of the self-taping screws that are provided in the kit.



1. Insert 2 of the provided 24" plastic ties through the mounting bracket mounted on the wall

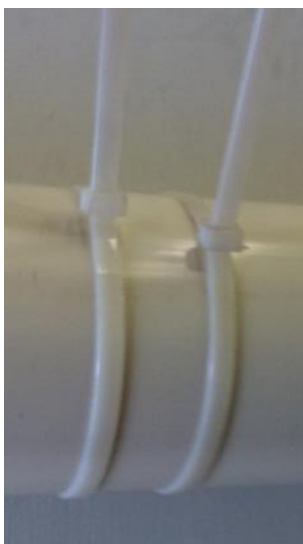

2. Secure the 4" PVC pipe to the trailer wall using the plastic ties.